















 

 
 
 



 

 



 







 





 

 

 




 

 

 




 









Original	Recharge	Original	Recharge
 Mute	 Mute / Dimmer	 Blue	 Blue / Prime Video / Random
 Power	 Power	 TV	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Menu	 Menu / Home
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 [=] / Text	 Text / Goto
 7	 7	 Down	 Down
 8	 8	 Back	 Back / Return
 9	 9	 P+	 CH+ / Page+
 i	 Info / Angle	 Vol +	 Vol+
 0	 0	 P-	 CH- / Page-
 AV	 AV / Input / RDS	 Vol-	 Vol-
 Red	 Red / Netflix / Search	 ^ / Hold	 Shift + Stop /
 Green	 Green / APP / Repeat	 << / F.T/L	 << / Tune-
 Yellow	 Yellow / YouTube / Repeat	 Play / [?]	 Play / Slow





Original	Recharge	
		Shift + Play /
		>> / Tune+
		Shift + >> /
		Shift + Sleep / Timer
		Shift + Rec / Rec Mode
		Rec / Rec Mode
		Stop / Hold
		Shift + Pause / Step /
		Pause / Step / Freeze
		Zoom / Size
		Sound / Title
		Audio / Lang I/II
		Sleep / Timer

Original	Recharge

