
























 











Original	Rechange	Original	Rechange
On/Off	 Power	T.Set/Clock	 Setup / OPT /
Audio Out	 Mute / Dimmer	Menu Right	 Right
Slow Down	 +  Shift + Play /	Exit	 Exit / Cancel / Clear
F.Adv	 Zoom / Size	Slow/Dpss+	 Vol+
Stop	 Stop / Hold	Menu Down	 Down
Pause	 Pause / Step / Freeze	Next	 >> / Preset+
Menu	 Menu / Home	Audio	 Audio / Lang I/II
Video/Go-To	 Text / Goto	1	 1
Menu Up	 Up	Prev.	 << / Preset-
Display	 Display / Media	2	 2
Slow/Dpss-	 Vol-	3	 3
Mon/TV	 Eject / Surround	4	 4
Sp/Lp/Speed	 D.Menu / Top	5	 5
Menu Left	 Left	6	 6
VCR/TV	 Info / Angle	7	 7
OK Enter	 OK	8	 8
Auto/Track	 Smart / List	Tracking+	 CH+ / Page+



Original	Rechange	Original	Rechange
Tracking-	 CH- / Page-		
9	 9		
-/--	 Guide / EPG / -/--		
Input Source	 AV / Input / RDS		
0	 0		
Record	 Rec / Rec Mode		
Rewind	 << / Tune-		
Play	 Play / Slow		
F.Forward	 >> / Tune+		
Repeat	 Green / APP / Repeat		
Timer/Sleep	 Sleep / Timer		
Case Tape	 Picture / Format		
Clear 00:00	 +  Shift + Exit / Cancel / Clear		
Progr/C/CH	 TV/Radio /		
Index Pict-	 +  Shift + CH- /		
Index Pict+	 +  Shift + CH+ /		
Ch.Memo	 Back / Return		

