 
 








 
 
 

 



 

 

 



 







 

 
 
 


 
 
 
 



 


 









	Original	Rechange	Original	Rechange
	AUX	 1	 Tuner PRESET +	 Ch +
	AUX 2	 7	 Tuner A/B/C/D/E	 Smart
	AUX 3	 8	 CD <<	 <<
	TAPE 2	 2	 CD >>	 >>
	TAPE 1	 3	 CD Disc	 List
	TUNER	 4	 CD PLAY	 Play
	CD	 5	 CD I<<	 I<<
	PHONO	 6	 CD >>I	 >>I
	Tape DIR. A	 Left	 CD PAUSE/STOP	 Stop
	Tape DIR. B	 Right	 CD PAUSE/STOP	 Pause
	Tape	 Shift + Rec	 Phono Play/Cut	 Media
	Tape PLAY	 Shift + Play	 POWER	 Power
	Tape <<	 Shift + <<	 Volume-	 Vol -
	Tape >>	 Shift + >>	 Volume+	 Vol +
	Tape STOP	 Shift + Stop		
	Tape A/B	 Ok		
	Tuner PRESET -	 Ch -		

