



Original	Recharge
Power DVD	Power
Direct Tv Rec	TV/R
Drive Select HDD	Media
Drive Select DVD	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
* Cancel	Guide
Input Select	AV
CH+	Ch +

Original	Recharge
CH-	Ch -
ShowView	Blue
Manual Skip	Subt
Skip	I<<
Skip	>>I
Slow/Search	<<
Slow/Search	>>
Stop	Stop
Pause	Pause
Play/x1.3	Play
Direct Navigator/Top	Menu
Functions	Options
Sub Menu	D. Menu
Return	Back
Up	Up
Down	Down
Right /	Right





Original	Recharge
Left /	Left
Enter	Ok
Prog/Check	Sleep
Display	Info
Status	3D
Time Slip	Format
Timer	Shift + AV
Erase	Exit
Rec Mode	Shift + Rec
Rec	Rec
(A) Ext Link	Red
(B) Dubbing	Green
(C) Create Chapter	Yellow
Audio	Dual
Power Tv	Shift + Power
AV Tv	Eject
CH+ Tv	Shift + Ch +

Original	Recharge
CH- Tv	Shift + Ch -
Volume+ Tv	Vol +
Volume- Tv	Vol -

