 



 





Original	Rechange
 Power	 Power
 Menu	 Menu
 [+]/Aspect	 3D
 Input TV	 TV/R
 Input AV	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 i	 Info
 X/Exit	 Exit
 Option	 Options
 Back/Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Rechange
 OK	 Ok
 Netflix	 Media
 Home	 Smart
 Guide	 Guide
 Mute	 Mute
 Text	 Text
 STTL	 Subt
 APPS	 Shift + Smart
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Rechange	Original	Rechange
 6 mno	6	 6	6
 7 pqrs	7	 7	7
 8 tuvw	8	 8	8
 9 wxyz	9	 9	9
 0	0	 0	0
 ? eHELP	?/eHelp	 SOUND DUAL	Dual
 Recall	Recall	 FAV PRE-CH	Pre Ch
 <<	<<	 <<	<<
 Play	Play	 PLAY MODE	Play
 >>	>>	 >>	>>
 I<<	I<<	 <<	I<<
 Pause	Pause	 Pause	Pause
 >>I	>>I	 >>I	>>I
 Stop	Stop	 Stop	Stop
 Rec	Rec	 REC MODE	Rec
 MY APP	My APP	 SHIFT + APP MEDIA	Shift + Media

Original	Rechange

