



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol +	 Vol+
 Pic. Mode	 Picture / Format
 S. Mode	 Sound / Title

Original	Recharge
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Source	 AV / Input / RDS
 CH -	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Menu	 Menu / Home
 Aspect	 Zoom / Size
 Sleep	 Sleep / Timer
 Media	 Display / Media
 MTS	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Size/Play/Pause		Play / Slow
	Reveal/Stop		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Text/ <<		<< / Preset-
	Index/>>		>> / Preset+
	Subpage/<<		<< / Tune-
	Hold/>>>		>>> / Tune+

Original	Recharge

