 
 


 







 
 
 



 










Original	Recharge
 Power	 Power
 Guide	 Guide
 DVI	 Back
 VGA	 Shift + Back
 RGB/HV	 Shift + Subt
 Option	 Options
 HDMI	 Red
 DVD/HD	 Green
 Video	 Subt
 TV	 Shift + TV/R
 Picture Mode	 Shift + 3D
 Size	 Format
 Sound	 Dual
 Audio Input	 List
 1	 1
 2	 2
 3	 3

Original	Recharge
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Pre Ch
 ENT	 Ok
 Display	 Info
 Menu	 Menu
 Auto Setup	 Smart
 Exit	 Exit
 Up	 Up
 Down	 Down
 +	 Right
 -	 Left





Original		Rechange	
	Vol+		Vol +
	Set		D. Menu
	Vol-		Vol -
	Mute		Mute
	CH RTN		Media
	CH+		Ch +
	CH-		Ch -
	Still On/Off		Eject
	Capture		Blue
	[≡]		Text
	PIP On/Off		3D
	Input		AV
	Change		Yellow
	MTS		TV/R
	Sleep		Sleep

Original		Rechange	

