 




















 


 

 
 
 
 
 
 
 

 








 

 


 







 



 
 
 

 







Original	Rechange	Original	Rechange
 Power	 Power	 Back	 Back
 Mute	 Mute	 VOD	 Smart
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 CH+	 Ch +
 4	 4	 CH-	 Ch -
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 OK	 Ok
 0	 0	 PVR	 Media
 [=]	 REPEAT TEXT	 Red	 Red
 FAV	 FAV PRE-CH	 Green	 Green
 MENU	 TOP MENU MENU	 LANG	 Yellow
 EPG	 -/~/ GUIDE	 Blue	 Blue
 i	 DISPLAY INFO	 ?	 SETTINGS OPT





	Original	Rechange	Original	Rechange
	<<		<<	<<
	>>		>>	>>
	Play		Play	Play
	Pause		Pause	Pause
	Stop		Stop	Stop
	Rec		Rec	Rec
	TV		3D	3D
	Radio		TV/R	TV/R
	Messages		Subt	Subt
	Search		Shift + TV/R	Shift + TV/R
	.:l		Dual	Dual

