 




Original	Recharge	Original	Recharge
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	1<<		1<< / Preset-
	>>1		>>1 / Preset+
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	≡		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Exit		Exit / Cancel / Clear
	Smart		Smart / List
	←		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+





Original	Recharge
 Vol-	 Vol-
 Home	 Shift + Menu /
 P-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 You Tube	 Shift + Yellow / YouTube /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 O/I/II	 Audio / Lang I/II
 [≡]	 Text / Goto
 Subt.	 Subtitle / EQ

Original	Recharge

