

 





 




 





 
 
 
 

 



 
 
 







Original	Rechange	Original	Rechange
On	Power	Muting	Mute / Dimmer
Standby	Shift + Power	Level Down	CH- / Page-
Sleep	Sleep / Timer	Level Up	CH+ / Page+
Return	Back / Return	I<<	I<< / Preset-
Setup	Setup / OPT /	Play	Play / Slow
Disc+	Shift + CH+ /	>>I	>>I / Preset+
Up	Up	<<	<< / Tune-
Vol+	Vol+	Stop	Stop / Hold
Disc-	Shift + CH- /	>>	>> / Tune+
Left	Left	Rec / Random	Rec / Rec Mode
Enter	OK	Pause / Play Rev.	Pause / Step / Freeze
Right	Right	Open / Close	Shift + Eject / Surround
Vol-	Vol-	Input Sel. DVD	2
Down	Down	Input Sel. CD	3
Audio	Audio / Lang I/II	Input Sel. V1	1
CH Sel	Smart / List	Input Sel. V2	4
Test	Text / Goto	Input Sel. T1	5





Original		Rechange	
	Input Sel. T2		8
	Input Sel. V3		7
	Input Sel. V4		9
	Input Sel. TUN		6
	Input Sel. PH		0
	Stereo		Sound / Title
	Direct		Red / Netflix / Search
	DSP ►		Shift + Right
	SURR		Eject / Surround
	A.ST		Green / APP / Repeat
	◄ DSP		Shift + Left
	SP A		Yellow / YouTube / Repeat
	SP B		Blue / Prime Video / Random
	Re-EQ		Subtitle / EQ
	Display		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Zone 2		AV / Input / RDS

Original	Rechange





Original	Rechange	Original	Rechange
	ON		Power
	STDBY		Shift + Power
	Return		Back / Return
	Setup		Setup / OPT /
	Disc+		CH+ / Page+
	Up		Up
	Vol+		Vol+
	Disc-		CH- / Page-
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Top Menu		D.Menu / Top
	Menu		Menu / Home
	Muting		Mute / Dimmer
	Angle		Info / Angle
	Subtitle		Subtitle / EQ
	I<<		I<< / Preset-
	Play		Play / Slow
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	>>		>> / Tune+
	Random		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Open / Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7















 



	Original	Recharge		Original	Recharge
	8		8		
	9		9		
	+10		Guide / EPG / -/--		
	0		0		
	Search		Red / Netflix / Search		















 













 

 



















 

 



 



Original	Rechange
 ON	 Power
 STDBY	 Shift + Power
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 Open / Close	 Eject / Surround
 1	 1
 2	 2

Original	Rechange
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/-
 0	 0





Original		Rechange		Original		Rechange	
	ON		Power		1		1
	STDBY		Shift + Power		2		2
	Vol+		Vol+		3		3
	Enter		OK		4		4
	Enter		Fav / Marker / PC		5		5
	Vol-		Vol-		6		6
	Muting		Mute / Dimmer		7		7
	I<<		I<< / Preset-		8		8
	Play		Play / Slow		9		9
	>>I		>>I / Preset+		+10		Guide / EPG / -/--
	<<		<< / Tune-		0		0
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Rec / Random		Rec / Rec Mode				
	Rec / Random		Blue / Prime Video / Random				
	Pause		Pause / Step / Freeze				
	Open / Close		Eject / Surround				

