

 

 
 
 




Original	Recharge
 Power	 Power
 SD	 Smart
 [ + ]	 Info
 Tv/AV	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv/Text	 Text
 F.P.	 Eject

Original	Recharge
 Index	 List
 Hold	 Options
 N	 Media
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
















 

 




Original		Rechange	
	0		0
	-/--		Guide
	C		Pre Ch
	Aspect		3D
	(↔)		Format
	Multiwindow		D. Menu
	Direct Tv Rec		TV/R
	Power VCR		Shift + Power
	Rec VCR		Rec
	Programme Up		Shift + Ch +
	Programme Down		Shift + Ch -
	<< VCR		<<
	>> VCR		>>
	Stop VCR		Stop
	Pause/Step VCR		Pause
	Play VCR		Play

Original		Rechange	





Original	Recharge	Original	Recharge
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Up	 Ch +		
 Programme Down	 Ch -		
 << DVD	 <<		
 >> DVD	 >>		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		

