 



 
 


 







 



 












 







Original	Rechange	Original	Rechange
 Standby	 Power	 -/--	 SHIFT + GUIDE Shift + Guide
 Mute	 Mute	 Recall	 FAV PRE-CH Pre Ch
 Source	 TIMER AV AV	 Menu	 TOP MENU MENU Menu
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format	 Exit	 CLEAR EXIT Exit
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual	 Text	 REPEAT TEXT Text
 Audio I/II	 SOUND DUAL Dual	 Display	 DISPLAY INFO Info
 Sleep	 PROG SLEEP Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 OK Ok
 5	 5	 Vol+	 + VOL Vol +
 6	 6	 Vol-	 VOL - Vol -
 7	 7	 CH+	 + CH Ch +
 8	 8	 CH-	 CH - Ch -
 9	 9	 Red	 A Red
 0	 0	 Green	 B Green





Original	Recharge	Original	Recharge
 Yellow	 Yellow		
 Blue	 Blue		
 Subtitle	 Subt		
 Size	 Format		
 Reveal	 Back		
 Mix	 Smart		
 Index	 List		
 EPG	 Guide		
 Play	 Play		
 Pause/Hold	 Pause		
 Stop/FAV	 Stop		
 I<</Cancel	 I<<		
 >>I/Subpage	 >>I		
 <</FAV-	 <<		
 >>/FAV+	 >>		

