



Original	Rechange
On / Standby	Power
Input Selector V1	1
Input Selector V2	4
Input Selector V3	7
Dimmer	Shift + Mute / Dimmer
Input Selector Multi CH	8
Return	Back / Return
Setup	Setup / OPT /
Enter	OK
Input Selector	2
Input Selector	5
Sleep	Sleep / Timer
Input Selector Tuner	6
SP A/B	Audio / Lang I/II
Muting	Mute / Dimmer
Up	Up
Down	Down

Original	Rechange
Right	Right
Input Selector CD	3
Left	Left
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
Play Rev.	Pause / Step / Freeze
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Display	Display / Media
Listening Mode Stereo	Sound / Title
Listening Mode Surround	Eject / Surround
Listening Mode <	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Test Tone	Text / Goto
Level-	CH- / Page-









 
Original	Rechange
Vol+	Vol+
CH Sel	Smart / List
Level+	CH+ / Page+
L.Night	TV/Radio /
Cine FLTR	D.Menu / Top
Vol-	Vol-
Input Tv	Shift + AV / Input / RDS
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
CH/Disc/Album	Shift + CH+ /
CH/Disc/Album-	Shift + CH- /
1 Tv	Shift + 1
2 Tv	Shift + 2
Power Tv/Standby	Shift + Power
3 Tv	Shift + 3
4 Tv	Shift + 4
6 Tv	Shift + 6

Original	Rechange
5 Tv	Shift + 5
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
+10 Tv	Shift + Guide / EPG / -/-
Enter Tv	Shift + OK
Right Tv	Shift + Right
Previous Menu Tv	Shift + Fav / Marker / PC
Left Tv	Shift + Left
Setup Tv	Shift + Setup / OPT / Tools
Up Tv	Shift + Up
Down Tv	Shift + Down



 





 





 


Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 VCR	 Shift + 4
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 CLR	 Exit / Cancel / Clear
 Top Menu	 D.Menu / Top
 Up	 Up
 Previous Menu/Muting	 Menu / Home

Original	Rechange
 Previous Menu/Muting	 Mute / Dimmer
 Left/Playlist/Cat-	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Return	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 I>>I	 I>>I / Preset+
 Stereo	 Sound / Title
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-






Original	Rechange	Original	Rechange
 Listening Mode >	 +  Shift + >> / Preset+		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Random	 Blue / Prime Video / Random		
 Repeat	 Green / APP / Repeat		
 Display	 Display / Media		
 Play Mode VCR	 Picture / Format		
 DVD	 +  Shift + 2		
 HDD	 +  Shift + 7		

Original	Rechange





Original	Rechange
 On / Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/10/-/-	 Guide / EPG / -/-
 0/11	 0
 12	 Fav / Marker / PC
 Disc+	 CH+ / Page+
 Vol+	 Vol+
 Disc-	 CH- / Page-
 Vol-	 Vol-

Original	Rechange
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stereo	 Audio / Lang I/II
 Surround	 Eject / Surround
 < Listening Mode	 Shift + I<< / Preset-
 Listening Mode >	 Shift + >>I / Preset+
 Random	 Blue / Prime Video / Random
 Repeat	 Green / APP / Repeat
 Display	 Display / Media





Original	Rechange
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10/10/-/-	Guide / EPG / -/-
0/11	0
CH+	CH+ / Page+
CH-	CH- / Page-
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold

Original	Rechange
<<	<< / Tune-
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Shift + I<< / Preset-
Listening Mode >	Shift + >>I / Preset+
Play Mode	D.Menu / Top
L.Night	Sleep / Timer

