

 
 


 



 






 

 

 






 
 











 



 







 

 

 

 



 

 






Original	Rechange	Original	Rechange
 Power	 Power	 S-Mode	 Dual
 Tv/AV	 AV	 P-Mode	 Format
 1	 1	 Call	 Back
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Menu	 Menu
 Lock	 Stop	 TXT/Tv	 Text
 -/--	 Guide	 Mix/Calendar	 Options
 Mute	 Mute	 Subp/Sound	 Subt
 Sleep	 Sleep	 Hold/Game	 Media
 Recall	 Pre Ch	 Reveal	 TV/R

Original	Rechange	Original	Rechange
 Power	 Power	 S-Mode	 Dual
 Tv/AV	 AV	 P-Mode	 Format
 1	 1	 Call	 Back
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Vol+	 Vol +
 9	 9	 Vol-	 Vol -
 0	 0	 Menu	 Menu
 Lock	 Stop	 TXT/Tv	 Text
 -/--	 Guide	 Mix/Calendar	 Options
 Mute	 Mute	 Subp/Sound	 Subt
 Sleep	 Sleep	 Hold/Game	 Media
 Recall	 Pre Ch	 Reveal	 TV/R



