




 



 





 

 















 
 


 

 

 



 







 



 

 

 


 
 

 




Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	TV / Radio		TV/R		Left		Left
	Source		AV		OK		Ok
	1		1		Right		Right
	2		2		Down		Down
	3		3		Red		Red
	4		4		Green		Green
	5		5		Yellow		Yellow
	6		6		Blue		Blue
	7		7		P- / Page-		Ch -
	8		8		P+ / Page+		Ch +
	9		9		V-		Vol -
	0		0		V+		Vol +
	List		List		Menu		Menu
	Guide		Guide		i		Info
	Exit		Exit		Mute		Mute
	Back		Back		Text		Text





Original		Rechange		Original		Rechange	
	SUB		Subt				
	Audio		Dual				
	Wide		Eject				
	OPT+		Options				
	V-Format		Format				

