



Original	Recharge
 Power	 Power
 [i+]/Search	 Info
 [i+]/Search	 TV/R
 [X]/Mark	 Pre Ch
 [..≡]/Zoom	 Options
 [..≡]/Zoom	 Shift + Eject
 [≡] / DVD Menu	 D. Menu
 [≡] / DVD Menu	 Text
 [?]/Subtitle	 Exit
 [] / A-B	 List
 [↓] / Repeat	 Shift + Text
 [◀▶] / Clear	 Format
 <<Fast	 <<
 >>Fast	 >>
 <<Skip	 I<<
 >>Skip	 >>I
 Stop/Eject	 Stop

Original	Recharge
 Stop/Eject	 Eject
 Pause/Play	 Play
 Pause/Play	 Pause
 Menu	 Menu
 OK	 Ok
 Up	 Up
 Left	 Left
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Red/Audio I-II	 Red
 Red/Audio I-II	 Dual
 Green / J	 Green





	Original	Recharge		Original	Recharge
	Green / ♪	 +  Shift + Dual			
	Yellow / □	 Yellow			
	Yellow / □	 +  Shift + Format			
	Blue / TV/DVD	 Blue			
	Blue / TV/DVD	 Media			
	1	 1			
	2	 2			
	3	 3			
	4	 4			
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			
	□→	 AV			
	P<P	 Back			

	Original	Recharge

