
 












 








 




 




Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 [ ]	 Display / Media
 [=]	 Text / Goto
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 [i+]	 Info / Angle

Original	Recharge
 Menu	 Menu / Home
 [+]	 Picture / Format
 Up	 Up
 Green	 Green / APP / Repeat
 Blue	 Blue / Prime Video / Random
 Down	 Down
 Right	 Right
 Yellow	 Yellow / YouTube / Repeat
 Left	 Left
 Red	 Red / Netflix / Search
 Vol+	 Vol+
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-

