



Original	Recharge
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SUBTIL	 Subt
 TV / SAT	 Smart
 FAV	 Pre Ch
 RCL	 Back
 Up / CH+	 Up

Original	Recharge
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 TXT	 Text
 USB	 Media
 Info	 Info
 Audio	 Dual
 M / P	 Options
 Up / CH+	 Ch +
 Page+	 Shift + Ch +
 Page-	 Shift + Ch -





Original	Rechange	Original	Rechange
 Red / SAT	 AV		
 Red / SAT	 Red		
 Green / Zoom	 Green		
 Green / Zoom	 Eject		
 Yellow / Pause	 Yellow		
 Yellow / Pause	 Shift + Pause		
 Blue / TV/Radio	 Blue		
 Blue / TV/Radio	 TV/R		
 <<<	 <<<		
 >>>	 >>>		
 Play	 Play		
 Stop	 Stop		
 I<<	 I<<		
 >>I	 >>I		
 Pause	 Pause		
 Slow	 Shift + Play		

Original	Rechange

