



	Original	Rechange	Original	Rechange
	Power	 Power		
	Input	 Source		
	Mute	 Blank / Mute		
	Menu	 Menu		
	Up	 Up		
	Down	 Down		
	Right/Bright+	 Right		
	Left/Bright-	 Left		
	Enter	 Enter		
	Vol+	 Vol + / Page +		
	Vol-	 Vol - / Page -		
	Return	 3D / Invert		
	Display	 Auto		
	Mode	 Mode		
	Size	 Eco / Aspect		

