 

 
 

 
 
 






 





 




 

 

 



 





 
 


 
 



 







 


 



 








Original		Recharge		Original		Recharge	
	Power		Power		I<		I<<
	USB		Smart		Play/Pause		Play
	Radio		TV/R		>I		>>I
	Coax		3D		Stop		Stop
	AUX		AV		Vol+		Vol +
	MP3 Link		Media		Vol-		Vol -
	Audio		Dual		Mute		Mute
	Setup		Menu		Surround		Options
	Back		Back		Treble		Ch +
	Info		Info		Bass		Ch -
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	OK		Ok		5		5
	>>		>>		6		6
	<<		<<		7		7



