



Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Text		Text
	3		3		EPG		Guide
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Stop		Stop
	0		0		Play		Play
	Timeshift		Media		Pause		Pause
	Recall		Back		<<		<<
	Mark		Smart		>>		>>
	Tv/Radio		TV/R		Rec		Rec
	Source		AV		I<<		I<<



