
 

 

 

 


 

 





 























Original		Recharge		Original		Recharge	
	POWER		Power		PIC MODE		Shift + Format
	SOURCE		AV		TEXT		Text
	EXIT		Exit		TV / RADIO		TV/R
	MENU		Menu		OK		Ok
	AUDIO		Dual		UP / CH+		Up
	1		1		DOWN / CH-		Down
	2		2		RIGHT		Right
	3		3		LEFT		Left
	4		4		PAGE UP		Ch +
	5		5		PAGE DOWN		Ch -
	6		6		VOL+		Vol +
	7		7		VOL-		Vol -
	8		8		SLEEP		Sleep
	9		9		SUB.		Subt
	0		0		RECALL		Back
	FAV		Pre Ch		RED		Red
	MUTE		Mute		GREEN		Green





Original		Recharge	
	YELLOW		Yellow
	BLUE		Blue
	STOP		Stop
	PAUSE		Pause
	REC		Rec
	REW		<<
	PLAY		Play
	FWD		>>
	SAT		Smart
	EPG		Guide
	HELP		D. Menu
	V. FORMAT		Format
	INFO		Info
	T / S		List
	POS.		Media

Original	Recharge

