



Original	Recharge
Power	Power
TV/VTR	TV/Radio /
Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Prog+	CH+ / Page+
Prog-	CH- / Page-
Vol+	Vol+

Original	Recharge
Vol-	Vol-
Play	Play / Slow
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Search >>	>> / Tune+
Index Search >>I	>>I / Preset+
I<< Index Search	I<< / Preset-
X2	Smart / List
<< Search	<< / Tune-
Skip	Exit / Cancel / Clear
Wheel >/Frame	Shift + >>I / Preset+
Up	Up
< Wheel/<	Shift + I<< / Preset-
Down	Down
Right	Right
Left	Left
Menu	Menu / Home







 





 

 





Original	Recharge
Execute	Blue / Prime Video / Random
Input Select	AV / Input / RDS
Audio Monitor	Audio / Lang I/II
Time Clear	Shift + Exit / Cancel / Clear
Auto/Manu	Setup / OPT /
Tracking Normal/Slow ▼	Shift + CH- /
Display	Display / Media
Tracking Normal/Slow ▲	Shift + CH+ /
Counter Reset	Back / Return
Rec	Rec / Rec Mode
Tape Speed SP/LP	Zoom / Size
Still Adjust I> Slow+	Shift + >> /
Still Adjust I> Slow-	Shift + << /
Quick Timer	Sleep / Timer
Timer Check	Shift + Sleep / Timer
Showview	Picture / Format
VPS/PDC	D.Menu / Top

Original	Recharge
Once	Red / Netflix / Search
Daily	Green / APP / Repeat
Weekly	Yellow / YouTube / Repeat





Original	Recharge	Original	Recharge
	Power		Power
	Display		Display / Media
	TV/VTR		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	Vol+		Vol+
	Vol-		Vol-
	Prog+		CH+ / Page+

Original	Recharge	Original	Recharge
	Prog-		CH- / Page-
	Audio Monitor		Audio / Lang I/II
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]		Text / Goto
	[]		Smart / List

