

 



Original		Rechange		Original		Rechange	
	On		Power		Left		Left
	Off	+	Shift + Power		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Mute		Mute		4		4
	Test		Smart		5		5
	Night		Exit		6		6
	[≡]		Text		7		7
	Sleep		Sleep		8		8
	Surr.		Dual		9		9
	SPKR/Menu		Menu		0		0
	Delay/Normal		Info		Tun-M/[≡+]		Guide
	CH./[≡?]		TV/R		Mem/[≡◇]		Pre Ch
	Digital/[≡X]		Media		Tuning ▲		Ch +
	Up		Up		Tuning ▼		Ch -
	Down		Down		Direct/Green		Green
	Right		Right		Clear/Yellow		Yellow












 



 

 



 



 

 



 



 



 

 



 




 




 
 




 
 

 
 


 


Original	Rechange
 Preset ▲	 Shift + Ch +
 Preset ▼	 Shift + Ch -
 OSD	 Back
 RDS/D.Skip	 Options
 Set	 Ok
 Red	 Red
 Blue	 Blue
 DVD	 Shift + 2
 AVR	 Shift + 1
 CD	 Shift + 3
 Tape	 Shift + 4
 VID1/VCR	 Shift + 5
 VID2/TV	 Shift + 6
 VID3/CBL/SAT	 Shift + 7
 VID4	 Shift + 8
 AM/FM	 Shift + 9
 6/8 CH	 Shift + Guide

Original	Rechange
 > DVD	 Play
 Logic 7	 Shift + Pre Ch
 Stereo	 Shift + Blue
 DTS Neo 6	 Shift + Yellow
 DTS Surr.	 Shift + Green
 Dolby	 Shift + Red
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause DVD	 Pause
 I<</Skip Down	 I<<
 Skip Up/>>I	 >>I








 





 
 

















 





Original		Rechange		Original		Rechange	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Night		Exit		5		5
	[≡]		Text		6		6
	Vol+		Vol +		7		7
	Vol-		Vol -		8		8
	SPKR/Menu		Menu		9		9
	CH./[≡?]		TV/R		0		0
	Digital/[≡X]		Media		Tun-M/[≡+]		Guide
	Delay/Normal		Info		Mem/[≡◇]		Pre Ch
	Up		Up		Direct		Smart
	Down		Down		Clear		Shift + Exit
	Right		Right		Preset ▲		Ch +
	Left		Left		Preset ▼		Ch -
	Set		Ok		RDS/D.Skip		Options
	1		1		>>		>>
	2		2		<<		<<





Original	Rechange
 Power On	 Power
 Power Off	 Shift + Power
 SPKR/Menu	 Menu
 Delay/Normal	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M/[≡+]	 Guide
 Mem/[≡◆]	 Pre Ch
 Direct	 Smart

Original	Rechange
 Preset ▲/Blue	 Ch +
 RDS/D.Skip	 Options
 >>	 >>
 <<	 <<
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 >>	 >>
 <<	 <<
 Power (On /Off)	 Media
 PR+ VCR	 Shift + Ch +
 PR- VCR	 Ch -
 Vol+ VCR	 Vol +
 Vol- VCR	 Vol -
 1 VCR	 Shift + 1
 2 VCR	 Shift + 2
 3 VCR	 Shift + 3



