



Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	TV		TV/R		[i]		Info
	Source		AV		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Netflix		Media
	3		3		Home		Smart
	4		4		*		Menu
	5		5		Back		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	List		List		Exit		Exit
	YouTube		Shift + Media		EPG		Guide
	Vol+		Vol +		Zoom		Eject
	Vol-		Vol -		≡		Options



