



 







 







 

 
 

 

 



 






Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 [≡]...	 Subt
 V+	 Vol +
 V-	 Vol -
 Mute	 Mute
 Voice	 Shift + Smart

Original	Rechange
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 [G]	 Guide
 i	 Info
 ←	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 FPay	 Shift + Media
 Menu	 Menu
 Source	 AV
 Red	 Red





Original		Recharge		Original		Recharge	
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Text		Text				

