 



 




 




	Original	Rechange		Original	Rechange
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Ok
	5		5		Vol +
	6		6		Vol -
	7		7		Shift + Dual
	8		8		Format
	9		9		Ch +
	0		0		Ch -
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Options
	Source		AV		Media
	CH List		List		Text





	Original	Rechange		Original	Rechange
	EPG	 GUIDE			I<<
	FAV	 PRE-CH			>>I
	Info	 INFO			Play
	Red	 A			Pause
	Green	 B			Stop
	Yellow	 C			Rec/Rep
	Blue	 D			
	DTV	 TV/R			
	Hold				
	List	 Shift + List			
	Subpage	 Shift + Subt			
	Index	 SMART			
	PVR List	 D. Menu			
	Mix	 Shift + 3D			
	Subtitle	 Subt			
	<<				
	>>	