

 
 












 

 


 



 

 



 

 
 
 





 


 
 

 
 

 
 
 


 



 


 
 










Original		Rechange		Original		Rechange	
	Power		Power		EPG		Guide
	Mute		Mute		Setup		Options
	1		1		Home	 + 	Shift + Smart
	2		2		Home		Menu
	3		3		Up / CH+		Ch +
	4		4		Up / CH+		Up
	5		5		Down / CH-		Ch -
	6		6		Down / CH-		Down
	7		7		Right / Pag+		Right
	8		8		Left / Pag-		Left
	9		9		Enter		Ok
	0 / FAV		0		Back		Back
	Goto	 + 	Shift + Guide		Rec		Rec
	Select / BGM		Pre Ch		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	TTX		Text		Stop		Stop
	Subtitle		Subt		Play / Pause		Play



