
 
 
 




 












 
 
 

 





 



 



 



 




 
 
 



 







 

 

 
 

 



 



 

 
 






 



Original	Rechange	Original	Rechange
	Power		Power
	P.Mode		Format
	Sleep		Sleep
	Dimmer		Shift + Mute
	Random		List
	Repeat		Text
	A-B		Shift + Text
	Time Disp.		3D
	Display		Info
	Timer		Shift + AV
	PTY		Ch -
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	+100		Pre Ch
	Listen Mode		Media
	Mode		Smart
	Volume+		Vol +
	Volume-		Vol -
	Top Menu		D. Menu
	Menu		Menu
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right





Original	Rechange
 Down	 Down
 Return	 Back
 Set	 Ch +
 Band/Tuner	 TV/R
 Play/Pause	 Play
 Play/Pause	 Pause
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Input Selector	 AV
 SP Setup	 Options
 DVD Setup	 Shift + Options
 D.Audio Rec	 Rec
 Flat	 Red
 D.Bass	 Green

Original	Rechange
 Tone Turn Over	 Yellow
 Manual EQ	 Blue
 Sound Preset	 Dual
 Auto Room EQ	 Shift + Green
 Room EQ Mode	 Shift + Yellow
 Channel Sel	 Shift + Blue
 On Screen	 Eject
 Audio	 Shift + Dual
 Subtitle	 Subt
 Mute	 Mute
 A1	 Shift + 1
 A2	 Shift + 2
 A3	 Shift + 3
 A4	 Shift + 4

