 





 


 






 







 

 

 



 
 
 
 




	Original	Rechange		Original	Rechange
	 Power	 Power		 Yellow	 Yellow
	 Input	 AV			
	 Menu	 Menu			
	 Up	 Up			
	 Down	 Down			
	 Right	 Right			
	 Left	 Left			
	 Enter	 Ok			
	 Vol+	 Vol +			
	 Vol-	 Vol -			
	 Mute	 Mute			
	 Return	 Back			
	 Display	 Info			
	 Mode	 Smart			
	 Size	 Format			
	 Red	 Red			
	 Green	 Green			

