



| Original      | Rechange                 |
|---------------|--------------------------|
| Standby       | Power                    |
| Equalizzatore | Shift + Sound / Title    |
| Surround      | Shift + Eject / Surround |
| Eject         | Eject / Surround         |
| Audio         | Audio / Lang I/II        |
| 1             | 1                        |
| 2             | 2                        |
| 3             | 3                        |
| Angle         | Info / Angle             |
| 4             | 4                        |
| 5             | 5                        |
| 6             | 6                        |
| Sottotitoli   | Subtitle / EQ            |
| 7             | 7                        |
| 8             | 8                        |
| 9             | 9                        |
| Ricerca       | Red / Netflix / Search   |

| Original | Rechange                  |
|----------|---------------------------|
| Canc     | Exit / Cancel / Clear     |
| 0/10     | 0                         |
| 10+      | Guide / EPG / -/-         |
| Titolo   | Sound / Title             |
| Up       | Up                        |
| Menu     | Menu / Home               |
| Left     | Left                      |
| OK       | OK                        |
| Right    | Right                     |
| Programm | TV/Radio /                |
| Down     | Down                      |
| Display  | Display / Media           |
| PAL/NTSC | D.Menu / Top              |
| Setup    | Setup / OPT /             |
| Digest   | Shift + D.Menu / Top Menu |
| Vol+     | Vol+                      |
| Mute     | Mute / Dimmer             |



