






















 





 

 






| Original   | Recharge  |
|--|---|
|  Power    |  Power   |
|  Sleep    |  Sleep   |
|  Mute     |  Mute    |
|  1        |  1       |
|  2        |  2       |
|  3        |  3       |
|  4        |  4       |
|  5        |  5       |
|  6        |  6       |
|  7        |  7       |
|  8       |  8      |
|  9      |  9     |
|  0      |  0     |
|  -/--   |  GUIDE |
|  Recall |  BACK  |
|  Audio  |  DUAL  |
|  P.M.   |  SMART |

| Original  | Recharge   |
|---|--|
|  Info                  |  INFO           |
|  Input                 |  AV             |
|  Up / CH+              |  Up             |
|  Up / CH+              |  CH +           |
|  Down / CH-            |  Down           |
|  Down / CH-            |  CH -           |
|  Right / Vol+ / Enter  |  Right          |
|  Left / Vol-           |  Left           |
|  Left / Vol-           |  Vol -          |
|  Right / Vol+ / Enter  |  Vol +          |
|  Right / Vol+ / Enter |  OK            |
|  Menu                |  MENU         |
|  Page+               |  >>I          |
|  Page-               |  I<<          |
|  Display             |  SHIFT + INFO |
|  Exit                |  CLEAR / EXIT |
|  Red                 |  A            |



