 
























 
 










 

 




| Original | Recharge | Original | Recharge |
|---|---|--|---|
|  Standby |  Power |  >>I/Subpage |  >>I / Preset+ |
|  Source |  AV / Input / RDS |  Menu |  Menu / Home |
|  Red |  Red / Netflix / Search |  Up |  Up |
|  Green |  Green / APP / Repeat |  Exit |  Exit / Cancel / Clear |
|  Yellow |  Yellow / YouTube / Repeat |  Left |  Left |
|  Blue |  Blue / Prime Video / Random |  Enter |  OK |
|  e |  Info / Angle |  Right |  Right |
|  Mouse |  Smart / List |  Play/Pause / Timeshift |  Pause / Step / Freeze |
|  Home |  Shift + Menu / |  Play/Pause / Timeshift |  Play / Slow |
|  TXT |  Text / Goto |  Down |  Down |
|  Mix/FAV.List |  Fav / Marker / PC |  Stop / EPG |  Stop / Hold |
|  Size/Subtitle |  Subtitle / EQ |  Vol+ |  Vol+ |
|  Cancel/Audio |  Audio / Lang I/II |  Mute |  Mute / Dimmer |
|  Record |  Rec / Rec Mode |  CH+ / Page+ |  CH+ / Page+ |
|  <</Index |  << / Tune- |  Vol- |  Vol- |
|  >>/Hold |  >> / Tune+ |  Tv/Radio |  TV/Radio / |
|  I<</Reveal |  I<< / Preset- |  CH- |  CH- / Page- |





| Original | | Rechange | | Original | | Rechange | |
|----------|--------------|---------------|-----------------|----------|--|----------|--|
| 1 | 1 | TV 1 | 1 | | | | |
| 2 | 2 | DVD 2 | 2 | | | | |
| 3 | 3 | CD - STB 3 | 3 | | | | |
| 4 | 4 | VIDEO 4 | 4 | | | | |
| 5 | 5 | TAPE 5 | 5 | | | | |
| 6 | 6 | TUNER 6 | 6 | | | | |
| 7 | 7 | AUX - HDD 7 | 7 | | | | |
| 8 | 8 | USB 8 | 8 | | | | |
| 9 | 9 | BLUETOOTH 9 | 9 | | | | |
| DISPLAY | [*]/Display | MEDIA DISPLAY | Display / Media | | | | |
| 0 | 0 | HDMI - BAT 0 | 0 | | | | |
| RECALL | Recall | RETURN BACK | Back / Return | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

