

 



 
 


 
 




 



 
 
 

 
 
 

 



 
 
 

 

 
 
 

 

 

 

 

 
 


 



 
 


 

 







Original		Recharge		Original		Recharge	
	Power		Power		Info		Info
	Mute		Mute		Up		Up
	PP		Pre Ch		Down		Down
	I-II		Dual		Right		Right
	1		1		Left		Left
	2		2		P+		Ch +
	3		3		P-		Ch -
	4		4		Vol+		Vol +
	5		5		Vol-		Vol -
	6		6		Red/Sound		Red
	7		7		Green/Picture		Green
	8		8		Yellow/Feature		Yellow
	9		9		Blue/Install		Blue
	0		0		TV		TV/R
	--		Guide		AV		AV
	P<P		Back		[≡]		Text
	Menu		Menu		[ /≡ ]		Media





Original	Rechange	Original	Rechange
	 Subt		
	 Format		
	 Options		
	 3D		
	 Smart		
	 Exit		

