



Original	Recharge
Power	Power
PP	Back / Return
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/-
Info	Info / Angle
I-II	Audio / Lang I/II

Original	Recharge
Up	Up
P+	CH+ / Page+
Left	Left
M	OK
M	Menu / Home
Right	Right
Down	Down
P-	CH- / Page-
Vol -	Vol -
Vol +	Vol +
Red/ Sound	Red / Netflix / Search
Red/ Sound	Sound / Title
Green/ Picture	Green / APP / Repeat
Green/ Picture	Picture / Format
Yellow Feature	Yellow / YouTube / Repeat
Blue/ Install	Blue / Prime Video / Random
TV	Display / Media



