


Original	Rechange
Power	Power
Sleep	Sleep / Timer
Timer Fader	Shift + Sleep / Timer
Program	Shift + TV/Radio / Program
1	1
2	2
3	3
4	4
5	5
6	6
≥10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
TAPE Rev Mode	Shift + 5
TAPE C-Reset	Text / Goto

Original	Rechange
TAPE Deck 1/2	Shift + 1
AUX	Shift + 7
TAPE REW	Zoom / Size
TAPE FF	Audio / Lang I/II
TAPE Stop	Stop / Hold
TAPE Play / Rev. Play	Setup / OPT /
TAPE Play / Rev. Play	Shift + Play /
TUNER Tune-	CH- / Page-
TUNER Tune+	CH+ / Page+
TUNER FM	TV/Radio /
TUNER	Shift + 6
TUNER	Shift + 9
CD I<<	Shift + I<< / Preset-
CD I<<	I<< / Preset-
CD >>I	>>I / Preset+
CD >>I	Shift + >>I / Preset+
CD Stop/Clear	Pause / Step / Freeze

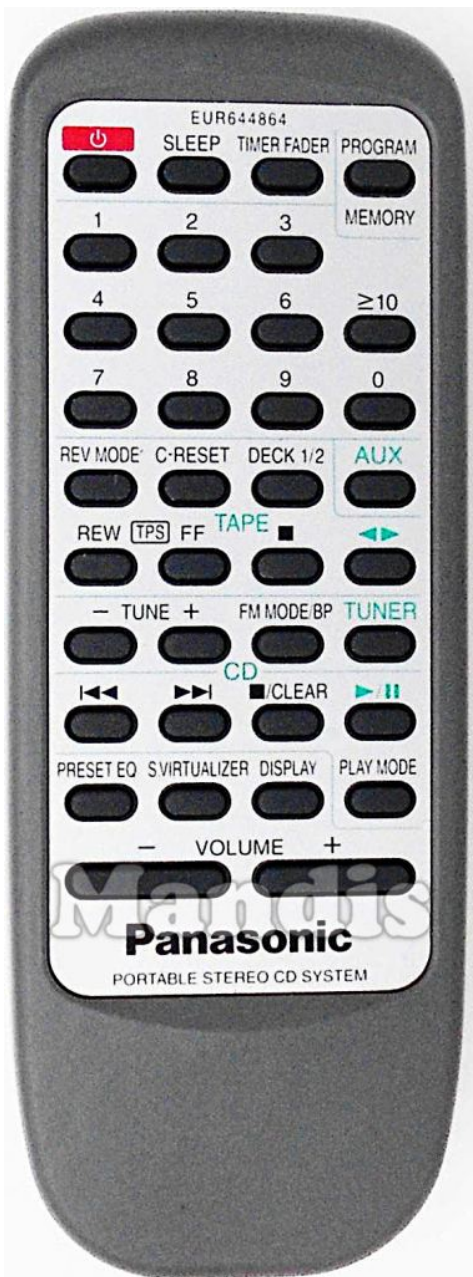



Original		Recharge		Original	Recharge
	CD Play/Pause		Play / Slow		
	CD Play/Pause	+	Shift + Pause / Step /		
	CD Play/Pause		D.Menu / Top		
	Preset EQ		Subtitle / EQ		
	S. Virtualizer		Sound / Title		
	Display		Display / Media		
	Display	+	Shift + Display / Media		
	CD Play Mode		Menu / Home		
	Volume-		Vol-		
	Volume+		Vol+		

