 


 


 

 
 





 



 

 

 












 
 















 
 
 
 
 

 

 



 

 

 

 







Original	Rechange	Original	Rechange
 POWER	Power	 POWER	Power
 MUTE	Mute	 MUTE	Mute
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 SAT	SAT	 HOME SMART	Smart
 ZOOM	Zoom	 ZOOM	Eject
 FAV+	FAV+	 >>I	>>I
 FAV-	FAV-	 I<<	I<<
 CHA	Up/CH+	 Up	Up
 CHV	Down/CH-	 Down	Down
 VOL+	Vol+	 Vol +	Vol +
 VOL-	Right	 Right	Right
 VOL-	Left	 Left	Left
 VOL-	Vol-	 Vol -	Vol -
 OK	OK	 OK	Ok
 EXIT	Exit	 EXIT	Exit
 AUDIO	Audio	 DUAL	Dual
 Red	Red	 Red	Red
 Menu	Menu	 TOP MENU	Menu
 PGUP	PgUp	 Ch +	Ch +
 PGDW	PgDn	 Ch -	Ch -
 FAV	FAV	 PRE-CH	Pre Ch
 EPG	EPG	 GUIDE	Guide
 TV/RADIO	Tv/Radio	 TV/R	TV/R
 RECALL	Green	 Green	Green
 RECALL	Recall	 BACK	Back

 






Original	Rechange	Original	Rechange
 POWER	Power	 POWER	Power
 MUTE	Mute	 MUTE	Mute
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 SAT	SAT	 HOME SMART	Smart
 ZOOM	Zoom	 ZOOM	Eject
 FAV+	FAV+	 >>I	>>I
 FAV-	FAV-	 I<<	I<<
 CHA	Up/CH+	 Up	Up
 CHV	Down/CH-	 Down	Down
 VOL+	Vol+	 Vol +	Vol +
 VOL-	Right	 Right	Right
 VOL-	Left	 Left	Left
 VOL-	Vol-	 Vol -	Vol -
 OK	OK	 OK	Ok
 EXIT	Exit	 EXIT	Exit
 AUDIO	Audio	 DUAL	Dual
 MENU	Menu	 TOP MENU	Menu
 MENU	Red	 Red	Red
 PGUP	PgUp	 Ch +	Ch +
 PGDW	PgDn	 Ch -	Ch -
 FAV	FAV	 PRE-CH	Pre Ch
 EPG	EPG	 GUIDE	Guide
 TV/RADIO	Tv/Radio	 TV/R	TV/R
 RECALL	Green	 Green	Green
 RECALL	Recall	 BACK	Back







Original	Rechange	Original	Rechange
 POWER	Power	 POWER	Power
 MUTE	Mute	 MUTE	Mute
 1	1	 1	1
 2	2	 2	2
 3	3	 3	3
 4	4	 4	4
 5	5	 5	5
 6	6	 6	6
 7	7	 7	7
 8	8	 8	8
 9	9	 9	9
 0	0	 0	0
 SAT	SAT	 HOME SMART	Smart
 ZOOM	Zoom	 ZOOM	Eject
 FAV+	FAV+	 >>I	>>I
 FAV-	FAV-	 I<<	I<<
 CHA	Up/CH+	 Up	Up
 CHV	Down/CH-	 Down	Down
 VOL+	Right	 Right	Right
 VOL-	Vol+	 Vol +	Vol +
 VOL-	Vol-	 Vol -	Vol -
 VOL-	Left	 Left	Left
 OK	OK	 OK	Ok
 EXIT	Exit	 EXIT	Exit
 AUDIO	Audio	 DUAL	Dual
 MENU	Red	 Red	Red
 MENU	Menu	 TOP MENU	Menu
 PGUP	PgUp	 Ch +	Ch +
 PGDW	PgDn	 Ch -	Ch -
 FAV	FAV	 Pre Ch	Pre Ch
 EPG	EPG	 Guide	Guide
 TV/RADIO	Tv/Radio	 TV/R	TV/R
 RECALL	Green	 Green	Green
 RECALL	Recall	 Back	Back



