




Original	Recharge
 Power	 Power
 Input TV	 Shift + AV / Input / RDS
 Aspect	 Picture / Format
 Input AV	 AV / Input / RDS
 Option	 Setup / OPT /
 Viera Link	 Smart / List
 SD Card	 D.Menu / Top
 Guide	 Guide / EPG / -/-
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Return	 Back / Return
 Red	 Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 1	 1
 [≡♦]/Sttl	 Subtitle / EQ
 [≡i]/Index	 Shift + Info / Angle
 [≡+]/Hold	 Shift + Stop /
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

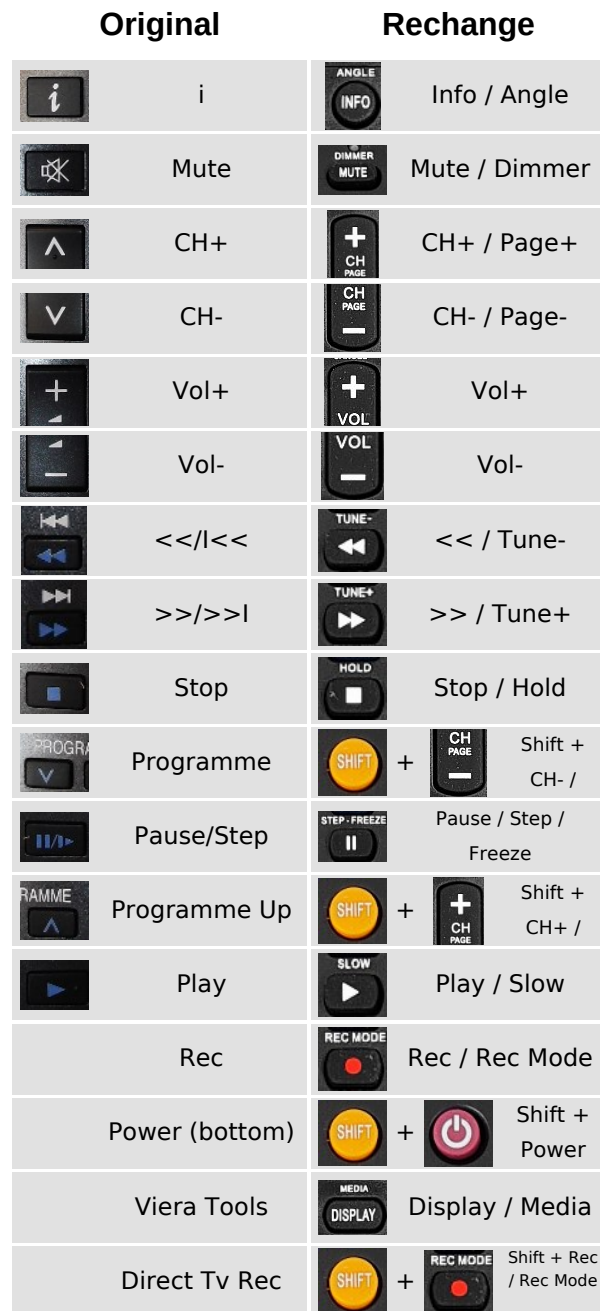

[illegible]