 
 






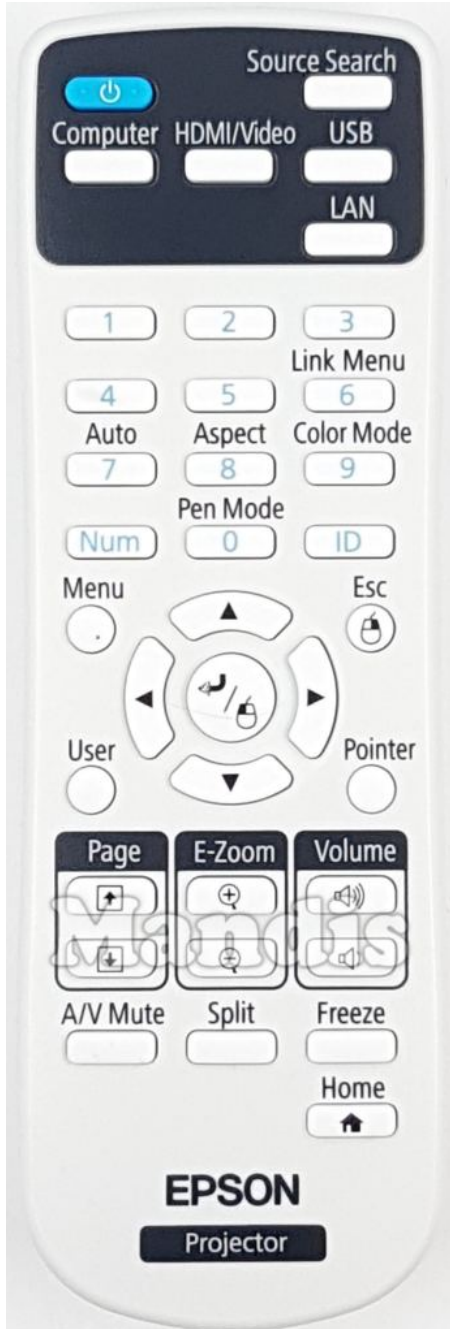


 





Original	Recharge
Power	Power
Source Search	Source
Computer	Comp / Video
HDMI/Video	Shift + Comp / Video
Lan	Volt / Focus
USB	3D / Invert
Menu	Menu
Auto	Auto
Aspect	Eco / Aspect
A/V Mute	Blank / Mute
User	Shift + Up
Color Mode	Mode
Pen Mode	Shift + Source
Link Menu	Shift + Menu
Pointer	Shift + Down
Freeze	Freeze / Timer
Esc	Shift + Mode

Original	Recharge
Home	Shift + Power
Split	Help / Info
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Enter
Vol+	Vol + / Page +
Vol-	Vol - / Page -
E-Zoom+	+ / Play
E-Zoom-	- / Stop
Page Up	Shift + Vol + / Page +
Page Down	Shift + Vol - / Page -
1	Shift + Freeze / Timer
2	Shift + + / Play
3	Shift + Volt / Focus
4	Shift + - / Stop





Original	Recharge
 5	 Shift + Info Help /
 6	 Shift + Aspect Eco / Aspect
 7	 Shift + Invert 3D /
 8	 Shift + Mute Blank / Mute
 9	 Shift + Right
 0	 Shift + Auto
 ID	 Shift + Left

Original	Recharge

