




 













Original	Recharge
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 I<</Skip Down	 I<< / Preset-
 >>I / Skip Up	 >>I / Preset+
 Subwoofer	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 SFC	 Eject / Surround
 OSD	 Picture / Format
 Timer	 Sleep / Timer
 TV	 TV/Radio /
 Top Menu	 D.Menu / Top

Original	Recharge
 Setup	 Setup / OPT /
 Test	 Text / Goto
 TV / AV	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter / Set	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Page	 Smart / List
 CH Select	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media



