










 
 


 
 




 










| Original | Recharge |
|--------------|----------|
| Power TV-SAT | Power |
| Up | Up |
| Down | Down |
| Right | Right |
| Left | Left |
| Enter | Ok |
| Menu | Menu |
| Guide | Guide |
| Exit | Exit |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |

| Original | Recharge |
|-----------------------------|---------------|
| 9 | 9 |
| 0 | 0 |
| Volume+ Tv | Vol + |
| Volume- Tv | Vol - |
| CH+ Tv Control | Ch + |
| CH- Tv Control | Ch - |
| TV/SAT | Media |
| Front | Smart |
| Power Front | Shift + Power |
| Play Front | Play |
| >> Front button"/> >> Front | >> |
| << Front button"/> << Front | << |
| Pause Front | Pause |
| Stop Front | Stop |
| Enter Down | 3D |
| Input Select | AV |
| 1 Front | Shift + 1 |







 
 



 


 


| Original | Recharge |
|--|---|
|  Power DVD |  Power |
|  Master |  Vol + |
|  Master Volume- |  Vol - |
|  Mute |  Mute |
|  Menu |  Menu |
|  Top Menu |  Shift + Menu |
|  Subtitle |  Subt |
|  Audio |  Dual |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |
|  Play |  Play |
|  << |  << |
|  >> |  >> |
|  I<< |  I<< |

| Original | Recharge |
|---|--|
|  Pause |  Pause |
|  Stop |  Stop |
|  >>I |  >>I |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  ·/+10 |  Pre Ch |





| Original | Rechange |
|--|--|
|  Power FM-AM |  Power |
|  Master |  Vol + |
|  Master Volume- |  Vol - |
|  Mute |  Mute |
|  Display |  Info |
|  T.Edit |  Smart |
|  RF ATT |  Media |
|  EON |  List |
|  Tune+ |  Up |
|  Tune- |  Down |
|  ST+ |  Right |
|  ST- |  Left |
|  Enter |  Ok |
|  D.Access |  Blue |
|  MPX |  Yellow |
|  Class |  Green |
|  Search |  TV/R |

| Original | Rechange |
|---|---|
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |





| Original | Rechange |
|--|---|
|  Power Receiver |  Power |
|  Signal Select |  Smart |
|  Power DVR-VCR |  Shift + Power |
|  DVD |  Shift + 1 |
|  TV/SAT |  Shift + 5 |
|  Front |  Shift + 4 |
|  Sleep |  Sleep |
|  DVR/VCR |  Shift + 2 |
|  FM/AM |  Shift + 3 |
|  Dimmer |  Media |
|  Auto |  D. Menu |
|  Surround |  Dual |
|  Advanced |  Subt |
|  Sound Mode |  Format |
|  Setup |  Options |
|  Test Tone |  Text |
|  CH. Select |  3D |

| Original | Rechange |
|--|--|
|  Room Setup |  Red |
|  Mute |  Mute |
|  - |  Green |
|  + |  Yellow |
|  Enter (Up) |  Shift + Pre Ch |
|  Master Volume- |  Vol - |
|  Master |  Vol + |
|  P+ |  Ch + |
|  Up/Tune+ |  Up |
|  Menu |  Menu |
|  Left/ST- |  Left |
|  Enter |  Ok |
|  Right/ST+ |  Right |
|  P- |  Ch - |
|  Down/Tune- |  Down |
|  Guide |  Guide |
|  EXIT |  << |



