



Original		Rechange		Original		Rechange	
	Stop		Stop		Return		Back
	Stop		Power		Up		Up
	Prog		Sleep		Zoom	+	Shift + Eject
	Subtitle		Subt		Left		Left
	Open / Close		Eject		Enter		Ok
	OSD		Info		Right		Right
	Step	+	Shift + Pause		Down		Down
	A-B	+	Shift + Text		Angle		Format
	Repeat		Text		USB		Media
	N/P		3D		Play		Play
	V-Mode		D. Menu		Pause		Pause
	Title		List		R/L		TV/R
	Slow	+	Shift + Play		Language		Dual
	Menu		Menu		Mute		Mute
	Clear		Exit		Vol+		Vol +
	PBC		Smart		Vol-		Vol -
	Setup		Options		1		1





	Original	Rechange		Original	Rechange
	2	2			
	3	3			
	4	4			
	5	5			
	6	6			
	7	7			
	8	8			
	9	9			
	10+	10+			
	100	10/0			
RESET	Reset	GUIDE	Guide		
GOTO	Goto	0	0		
		TIMER	AV		
REV	REV	AV	AV		
		FAV	Pre Ch		
FWD	FWD	PRE-CH	Pre Ch		
		<<	<<		
PREV	Prev	>>	>>		
		I<<	I<<		
NEXT	Next	>>	>>		

	Original	Rechange		Original	Rechange

