








 




 
 

 





 



 



 



 





 







 

 

 


















Original		Rechange		Original		Rechange	
	Power		Power		3		3
	Mute		Mute		4		4
	Play		Play		5		5
	[=]		Text		6		6
	Pause/[ /≡]		Pause		7		7
	Stop/[≡+]		Stop		8		8
	Rec/[≡◇]		Rec		9		9
	<</[≡o]		<<		0		0
	l<</[≡i]		l<<		Menu		Menu
	>> /[≡?]		>>		Exit		Exit
	>>/[≡x]		>>		Up		Up
	Info		Info		Left		Left
	EPG		Guide		OK		Ok
	Subtitle		Subt		Right		Right
	Audio		Dual		Down		Down
	1		1		Back		Back
	2		2		Home/Source		Smart





Original	Recharge	Original	Recharge
SOURCE	Home/Source	TIMER AV	AV
VOL+	Vol+	+ VOL	Vol +
VOL-	Vol-	VOL -	Vol -
LIST	List	DISC NAV LIST	List
CH+	P+	+ CH	Ch +
CH-	P-	CH -	Ch -
Red	Red	A	Red
USB	Green	B	Green
ANTENNA	Yellow	C	Yellow
BAT.LIST	Blue	D	Blue
ZOOM	Zoom	ZOOM	Eject
REC.LIST	Rec.List	SEARCH TV/R	TV/R
FAV	FAV	FAV PRE-CH	Pre Ch

Original	Recharge

