




	Original	Rechange		Original	Rechange
	Power		Power		Mute
	Source		AV		Ch +
	HDMI		Smart		Ch -
	1		1		CH List
	2		2		Media.P
	3		3		Menu
	4		4		FAV.CH
	5		5		Tools
	6		6		Info
	7		7		Exit
	8		8		Return
	9		9		Up
	0		0		Down
	--		Guide		Right
	PRE-CH		Pre Ch		Left
	Vol+		Vol +		Enter
	Vol-		Vol -		Red
					Mute
					Ch +
					Ch -
					List
					Media
					Menu
					Shift + Pre Ch
					Options
					Info
					Exit
					Back
					Up
					Down
					Right
					Left
					Ok
					Red





Original	Rechange	Original	Rechange
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 S.Mode	 Dual		
 Sleep	 Sleep		
 MTS	 TV/R		
 P.Mode	 Format		
 P.Size	 3D		
 CC	 Subt		
 <<<	 <<<		
 Pause	 Pause		
 >>>	 >>>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

