





 










 
 



 

 



 

 





 





















 

 

 


 






Original	Rechange	Original	Rechange
 Power	 Power	 Right	 Right
 Mute	 Mute / Dimmer	 Exit	 Exit / Cancel / Clear
 Play	 Play / Slow	 Down	 Down
 Pause	 Pause / Step / Freeze	 ←	 Back / Return
 Stop	 Stop / Hold	 V+	 Vol+
 Rec	 Rec / Rec Mode	 Smart	 Smart / List
 <<	 << / Tune-	 P+	 CH+ / Page+
 >>	 >> / Tune+	 V-	 Vol-
 Lang	 Audio / Lang I/II	 P-	 CH- / Page-
 [≡]..	 Subtitle / EQ	 1	 1
 Text	 Text / Goto	 2	 2
 Source	 AV / Input / RDS	 3	 3
 Menu	 Menu / Home	 4	 4
 Up	 Up	 5	 5
 i	 Info / Angle	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8





Original	Recharge	Original	Recharge
9	9		
Guide	Guide / EPG / -/--		
0	0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Home	Shift + Menu /		
Netflix	Shift + Red / Netflix /		
YouTube	Shift + Yellow / YouTube /		

Original	Recharge

