


Original		Rechange		Original		Rechange	
	Standby		Power		Title / TTX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		Menu / PBC		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Left / Fav-		Left
	Rec		Rec / Rec Mode		Enter		OK
	<<		<< / Tune-		Right / Fav+		Right
	>>		>> / Tune+		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	SUBT / RIP		Subtitle / EQ		L/R		Smart / List
	Open / Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV / Radio		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3

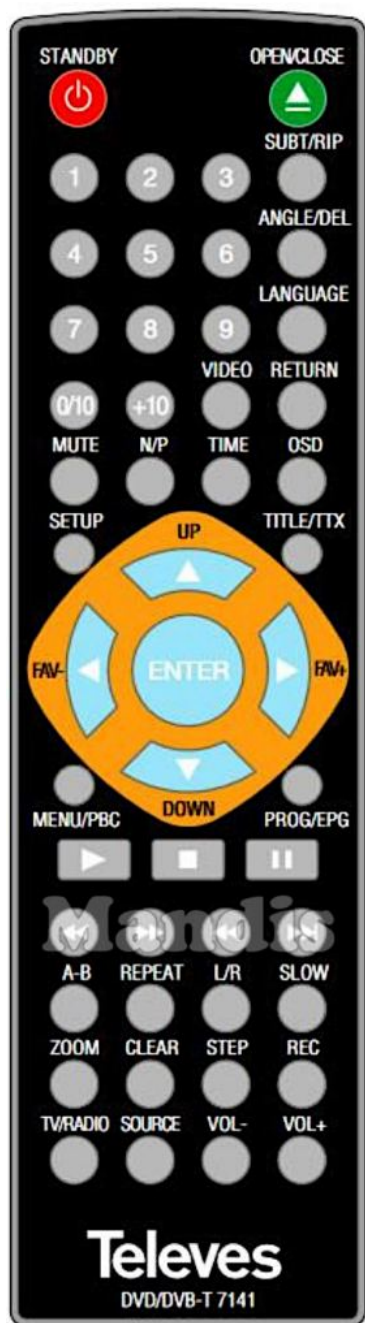



Original		Rechange		Original		Rechange	
[4]	4	[VIDEO 4]	4				
[5]	5	[TAPE 5]	5				
[6]	6	[TUNER 6]	6				
[7]	7	[AUX - HDD 7]	7				
[8]	8	[USB 8]	8				
[9]	9	[BLUETOOTH 9]	9				
[+10]	+10	[GUIDE EPG]	Guide / EPG / -/--				
[+10]	0/10	[HDMI - BAT 0]	0				
[REPEAT]	Repeat	[APP REPEAT]	Green / APP / Repeat				
[A-B]	A-B	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat				
[SLOW]	Slow	[SHIFT + SLOW]	Shift + Play /				
[STEP]	Step	[SHIFT + STEP - FREEZE]	Shift + Pause / Step /				
[PROG/EPG]	Prog / EPG	[SHIFT + PROGRAM TV/RADIO]	Shift + TV/Radio / Program				
[ANGLE/DEL]	Angle / Del	[SHIFT + RETURN BACK]	Shift + Back / Return				
[N/P]	N/P	[SHIFT + MEDIA DISPLAY]	Shift + Display / Media				
[VIDEO]	Video	[SHIFT + VIDEO 4]	Shift + 4				
[PROG/EPG]	Prog / EPG	[SHIFT + GUIDE EPG]	Shift + Guide / EPG / -/--				

