




 

 

 

 

 



 








 






 



 







 

 







 



 
 










 











 
 






 









 



 





 










Original	Recharge	Original	Recharge
 Power	 Power	 Super SRND	 Subt
 AUX	 1	 Simulated ST.	 Media
 AUX	 Red	 SFC	 List
 TUNER / BAND	 2	 Mix 2ch	 Smart
 TUNER / BAND	 Shift + TV/R	 Test	 Text
 TUNER / BAND	 Green	 CH Select	 Ok
 DVD / CD	 3	 CH+	 Ch +
 DVD / CD	 Blue	 CH-	 Ch -
 TV	 Yellow		
 TV	 4		
 TV	 TV/R		
 VCR	 5		
 Volume+	 Vol +		
 Volume-	 Vol -		
 Muting	 Mute		
 Subwoofer	 Dual		
 Dd Prologic	 Options		





Original	Rechange	Original	Rechange
 Power	 Power	 3 / Disc 3	 3
 AUX	 Shift + 1	 4 / Disc 4	 4
 AUX	 Red	 5 / Disc 5	 5
 TUNER / BAND	 Shift + 2	 6	 6
 TUNER / BAND	 Shift + TV/R	 7	 7
 TUNER / BAND	 Green	 8	 8
 DVD / CD	 Shift + 3	 9	 9
 DVD / CD	 Blue	 0	 0
 TV	 Yellow	 ≥10 / -/-	 Guide
 TV	 Shift + 4	 Disc	 Pre Ch
 TV	 TV/R	 Pause	 Pause
 VCR	 Shift + 5	 << Slow/Search	 <<
 Volume+	 Vol +	 Slow/Search >>	 >>
 Volume-	 Vol -	 Play	 Play
 Muting	 Mute	 I<< Skip	 I<<
 1 / Disc 1	 1	 Stop	 Stop
 2 / Disc 2	 2	 Skip >>I	 >>I











 

 



 









 






Original	Recharge
Disc Manager	D. Menu
Play Mode	+  Shift + Play
Clear	Exit
Repeat	Text
A-B Repeat	+  Shift + Text
Title	Smart
Marker	Media
Return	Back
Display	Info
Up / On	Up
Down / Off	Down
Left	Left
Right	Right
Select	Ok
Menu	Menu
Set Up	Options
Sub Title	Subt

Original	Recharge
Audio	Dual
Angle	Format
FL Display	+  Shift + Info
Timer	AV








 
 












 
















	Original	Rechange	Original	Rechange
	Power			
	TV/AV			
	CH+			
	CH-			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	≥10 / -/--			





	Original	Rechange	Original	Rechange
	Power			Play
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	≥10 / -/--			
	CH+			
	CH-			
	Stop			
	<<			
	>>	