


 



 

 

 
 

 

 

 
 


 
 



 



 

 







 




 



 

 
 






 

 


 


 



 
 

 
 
 


| Original | Recharge |
|---|---|
|  Power |  Power |
|  Eject |  Shift + Eject |
|  Open/Close |  Eject |
|  Display Call |  Info |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/AV |  0 |
|  Channel+ |  Ch + |
|  Channel- |  Ch - |
|  Showview/Progra |  Guide |

| Original | Recharge |
|--|--|
|  Timer Rec |  AV |
|  Rec OTR |  Rec |
|  Marker/Tape |  Options |
|  Jump/Zero Return |  Pre Ch |
|  Clock/Counter |  Yellow |
|  Counter Reset |  Green |
|  Tv/VCR |  TV/R |
|  VCR |  Smart |
|  DVD |  Media |
|  Setup Menu |  Menu |
|  DVD Menu |  D. Menu |
|  Up |  Up |
|  Down |  Down |
|  Right/TRK+ |  Right |
|  Left/TRK- |  Left |
|  Enter/Select |  Ok |
|  Title |  Red |





| | Original | Rechange | | Original | Rechange |
|---|------------------|--|--|----------|----------|
|  | Return |  Back | | | |
|  | Stop |  Stop | | | |
|  | Play |  Play | | | |
|  | Pause |  Pause | | | |
|  | I<</ Index/Skip |  I<< | | | |
|  | << |  << | | | |
|  | >> |  >> | | | |
|  | >>I/Skip/Index + |  >>I | | | |
|  | I>/Slow |  D Blue | | | |
|  | Cancel |  Exit | | | |
|  | Repeat A-B |  Text | | | |
|  | Zoom |  3D | | | |
|  | Angle |  List | | | |
|  | Play Mode |  +  Shift + Play | | | |
|  | Subtitle |  Subt | | | |
|  | Audio |  Dual | | | |

