 


Original		Rechange		Original		Rechange	
	Open/Close		Eject / Surround		4		4
	Power		Power		5		5
	Stereo/Mono		Shift + Audio / Lang I/II		6		6
	Name		Text / Goto		Band		TV/Radio /
	Dimmer		Shift + Mute / Dimmer		Angle		Info / Angle
	Repeat		Green / APP / Repeat		7		7
	Tv/Video		AV / Input / RDS		8		8
	Clear		Exit / Cancel / Clear		9		9
	Memory		Rec / Rec Mode		Sound Field		Sound / Title
	Time		Sleep / Timer		Subtitle		Subtitle / EQ
	Muting		Mute / Dimmer	>10 button"/>	>10		Guide / EPG / -/-
	Play Mode		Shift + Play /		10/0		0
	1		1		Enter		Fav / Marker / PC
	2		2		Display		Display / Media
	3		3		Vol+		Vol+
	Function		Smart / List		Vol-		Vol-
	Audio		Audio / Lang I/II		I<</Preset-		I<< / Preset-

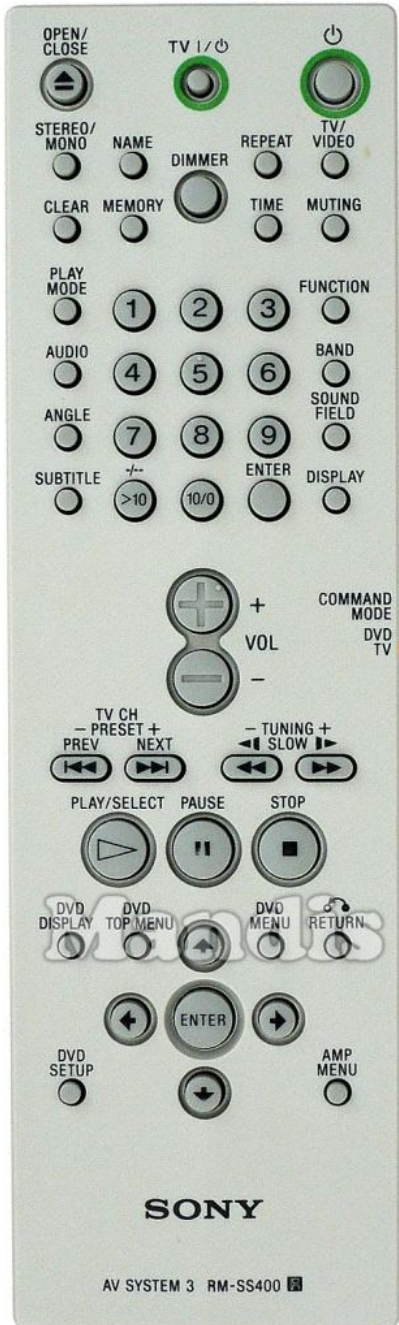 




Original	Recharge
>>I/Preset+	>>I / Preset+
<</Tuning-/<I	<< / Tune-
Tuning+/Slow	>> / Tune+
Play/Select	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
DVD Display	Shift + Display / Media
DVD Top Menu	Shift + D.Menu / Top Menu
Up	Up
DVD Menu	D.Menu / Top
Return	Back / Return
Left	Left
Enter	OK
Right	Right
DVD Setup	Setup / OPT /
Down	Down
AMP Menu	Menu / Home

Original	Recharge



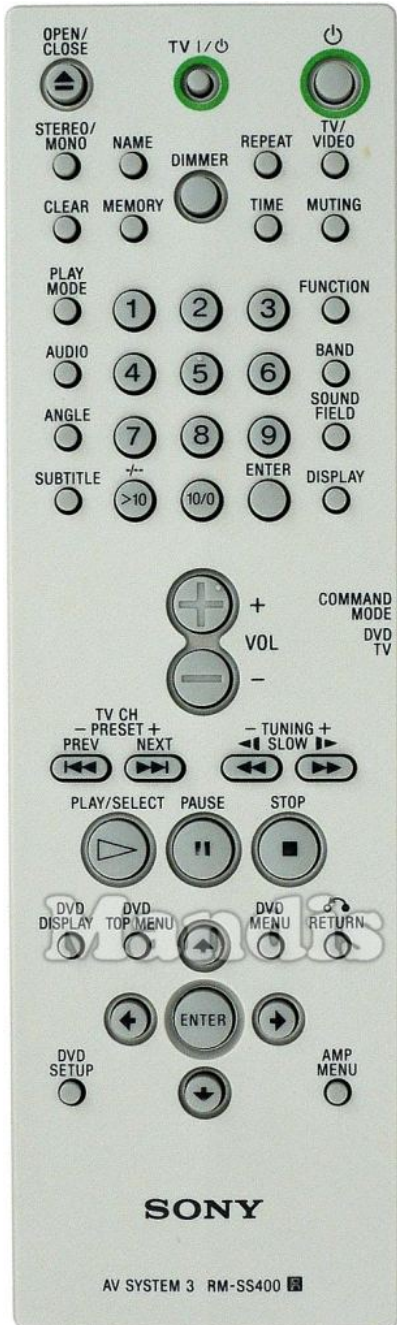

Original	Rechange
Power Tv	Power
Stereo/Mono	Audio / Lang I/II
Tv/Video	AV / Input / RDS
Memory	Rec / Rec Mode
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Smart / List
4	4
5	5
6	6
Band	TV/Radio /
7	7
8	8
9	9
Sound Field	Sound / Title

Original	Rechange
>10	Guide / EPG / -/-
10/0	0
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home

