 




 


 









 
Original	Rechange
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 AVR	 Shift + 1
 DVD	 Shift + 2
 Tape	 Shift + 4
 HDMI 1	 Shift + 3
 VID 1 / VCR	 Shift + 5
 VID 2 / CBL/SAT	 Shift + 6
 VID 3 / TV	 Shift + 7
 AM/FM	 Shift + 9
 6 CH.	 Shift + 0
 Sleep / CH +	 Sleep
 Sleep / CH +	 Shift + Ch +
 SURR. / CH -	 Shift + Ch -
 Test	 Text
 OSD	 D. Menu

Original	Rechange
 Vol +	 Vol +
 Vol -	 Vol -
 CH / Guide	 Guide
 SPKR / Menu	 Menu
 Up	 Up
 Left	 Left
 Set	 Ok
 Right	 Right
 Down	 Down
 Digital / Exit	 Exit
 Delay / Prev. CH	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Rechange
 7	 7
 8	 8
 9	 9
 0	 0
 Tun-M	 Smart
 MEM	 Media
 Tuning +	 Shift + Up
 Tuning -	 Shift + Down
 Direct	 Info
 Tone	 List
 Clear	 Shift + Exit
 Preset +	 Ch +
 Preset -	 Ch -
 Dolby	 Red
 DTS SUR	 Green
 DTS NEO:6	 Yellow
 Night	 Shift + Sleep

Original	Rechange
 Logic 7	 Blue
 Stereo	 Shift + Red
 DIM	 Shift + 8
 <<	 <<
 Play / Play	 Play
 >>	 >>
 Rec	 Rec
 Stop	 Stop

